

CX Series Remote Control IR Codes

IR Code Details:-

- RC5 System Code 16 codes – Controls the CXA & the volume of the CXN
- RC5 System Code 20 codes – Controls the CXC
- RC5 System Code 24 & 28 codes – Controls the CXN
- RC5 System Code 25 codes – Control power & LCD brightness of CXA/CXN/CXC

IR Button - Function Table

Product	Command	System Code	Control Code
Generic	Power On	25	14
	Power Off	25	15
	LCD Bright	25	18
	LCD Dim	25	19
	LCD Off	25	71
	Mute toggle	16	13
	Volume +	16	16
	Volume -	16	17
CXA	A1	16	100
	A2	16	101
	A3	16	102
	A4	16	103
	MP3	16	108
	D1	16	105
	D2	16	106
	D3	16	107
	Bluetooth	16	115
	USB	16	114
CXN	More	24 or 28	9
	Shuffle	24 or 28	20
	Repeat	24 or 28	21
	Digital In Menu	24 or 28	120
	Home	24 or 28	12
	Info	24 or 28	28
	Skip back	24 or 28	23
	Skip forward	24 or 28	25
	Return	24 or 28	22
	Play/Pause	24 or 28	24
	Up	24 or 28	13
	Down	24 or 28	19
	Left	24 or 28	16
	Right	24 or 28	18
	Enter	24 or 28	17
	Preset 1	24 or 28	57
Preset 2	24 or 28	58	

	Preset 3	24 or 28	59
	Preset 4	24 or 28	60
	Preset 5	24 or 28	61
	Preset 6	24 or 28	62
	Preset 7	24 or 28	63
	Preset 8	24 or 28	64
CXC	Eject	20	45
	Stop	20	54
	Pause	20	48
	Play	20	53
	Skip back	20	33
	Skip forward	20	32
	Scan back	20	44
	Scan forward	20	43
	Repeat	20	29
	Shuffle	20	28