



## Topaz SR10 Stereo Receiver Remote Control Codes

All Codes are NEC format.

Remote Button	(NEC Code) IR Code
Mute	C0 3F 00 FF
Speaker A/B	C0 3F 1A E5
Stereo/Mono (Tuner)	C0 3F 19 E6
Mode (Tuner)	C0 3F 18 E7
Volume Up	C0 3F 1D E2
Skip/Scan down (Tuner)	C0 3F 1E E1
Menu	C0 3F 5A A5
Skip/Scan up (Tuner)	C0 3F 1C E3
Volume Down	C0 3F 5E A1
Preset 1/5	C0 3F 03 FC
Preset 2/6	C0 3F 40 BF
Preset 3/7	C0 3F 42 BD
Preset 4/8	C0 3F 41 BE
CD	C0 3F 1B E4
FM	C0 3F 58 A7
AM	C0 3F 59 A6
BD/DVD	C0 3F 1F E0
MP3/AUX	C0 3F 5C A3
PHONO	C0 3F 5D A2
Source	C0 3F 52 AD

Information in this document has been carefully checked for accuracy; however, Cambridge Audio's policy is one of continuous improvement, therefore design and specifications are subject to change without prior notice. If you notice any errors please feel free to email us at: [www.cambridgeaudio.com/sts](http://www.cambridgeaudio.com/sts)

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

© Copyright Cambridge Audio Ltd 2010