

<b>NEC: 49 B6</b>	<b>752BD</b>	<b>CXU</b>	<b>CXUHD</b>
Backlight	N/A	Yes	Yes
0C F3	Open/Close	Open/Close	Open/Close
04 FB	On/Standby toggle	On/Standby toggle	On/Standby toggle
0E F1	Info	Info	Info
14 EB	1	1	1
08 F7	2	2	2
00 FF	3	3	3
10 EF	Page Up	Page Up	Page Up
05 FA	4	4	4
09 F6	5	5	5
01 FE	6	6	6
11 EE	Page Down	Page Down	Page Down
19 E6	7	7	7
15 EA	8	8	8
0D F2	9	9	9
20 DF	N/A	Mute	N/A
12 ED	Home	Home	Home
0A F5	0	0	0
06 F9	Go To	Go To	Go To
02 FD	Clear	Clear	Clear
4C B3	Volume Up	Volume Up	N/A
07 F8	Skip Back	Skip Back	Skip Back
48 B7	Up	Up	Up
0F F0	Skip Fwd	Skip Fwd	Skip Fwd
52 AD	Stop	Stop	Stop
42 BD	Left	Left	Left
4D B2	Enter	Enter	Enter
41 BE	Right	Right	Right
51 AE	Play/Pause	Play/Pause	Play/Pause
1B E4	Scan Back	Scan Back	Scan Back
55 AA	Down	Down	Down
0B F4	Scan Fwd	Scan Fwd	Scan Fwd
46 B9	Volume Down	Volume Down	N/A
50 AF	Top Menu	Top Menu	Top Menu
40 BF	Pop Up Menu	Pop Up Menu	Pop Up Menu
54 AB	Setup Menu	Setup Menu	Setup Menu
49 B6	Return	Return	Return
45 BA	Pure Audio	Pure Audio	Pure Audio
2A D5	Filter	Filter	N/A
56 A9	Sound Track	Sound Track	Sound Track
57 A8	Subtitle	Subtitle	Subtitle
23 DC	N/A	Options	Options
44 BB	Red	Red	Red
58 A7	Green	Green	Green

<b>NEC: 49 B6</b>	<b>752BD</b>	<b>CXU</b>	<b>CXUHD</b>
03 FC	Yellow	Yellow	Yellow
17 E8	Blue	Blue	Blue
28 D7	N/A	Darbee	HDR
2B D4	Digital Inputs	Digital Inputs	Digital Inputs
4F B0	A/B	A/B	A/B
53 AC	Repeat	Repeat	Subtitle
22 DD	3D	N/A	N/A
24 DB	DIM	DIM	DIM
4B B4	Angle	N/A	N/A
43 BC	Zoom	Zoom	Zoom
4A B5	Res	Res	Res
16 E9	TV Type	N/A	N/A