



## Sonata NP30 Remote Control Codes

### NP Codes

System Code = 24/27\* (RC-5 Codes)

\* IN SONATA MODE PRESSING & HOLDING DOWN REPLY BUTTON FOR 15 SECONDS SWITCHES BETWEEN RC-5 SYSTEM 24 & 27

\* THE REMOTE WILL BE IN AMP MODE BY DEFAULT. TO PUT THE REMOTE IN RECEIVER MODE PRESS & HOLD DOWN CD BUTTON WHILST INSERTING BATTERIES. TO PUT THE REMOTE IN SONATA MODE PRESS & HOLD DOWN THE NP BUTTON WHILST INSERTING BATTERIES.

Key	Command Code(Decimal)
Standby	2
1	31
2	32
3	33
4	34
5	35
6	36
7	37
8	38
9	39
0	40
10+	41
Store	26
Home	12
Return	22
Display Dim	50
Display Bright	51
Up	13
Left	16
Select	17
Right	18
Down	19
Reply	9
Info	28
Play/Pause	24
Stop	27
Skip Left	23
Skip Right	25
Random	20
Repeat	21