

## iD100 IR Codes

**Manufacturer Code: 41 BE** (NEC Code)

Key	Command Code (Hex)
Sync	1B
Standby	02
Menu	03
Up	05
Previous Track	00
Select	06
Next Track	07
Down	08
Repeat Setting Advance	09
Play/Pause	04
Shuffle Setting Advance	0A
OSD	1D
Charge	1E

### AMP Mode

(Default Mode)

**System Code: 16** (RC-5 Code)

Key	Command Code (Hex)
Vol +	16
Vol -	17
Source Up	8
Mute*	13

\*Also sends hidden learning IR commands

### RECEIVER Mode

(Press & Hold Standby Button when inserting battery to enable RECEIVER Mode)

**System Code: 16** (RC-5 Code)

Key	Command Code (Hex)
Vol +	76
Vol -	77
Source Up	99
Mute*	75

\*Also sends hidden learning IR commands



**Supported by the dock, but NOT included on the remote**

**Manufacturer Code: EE 87** (NEC Code)

Key	Command Code (Hex)
Skip back	08 / 09
Play/pause	04 / 05
Skip forward	07 / 06
Menu (stop)	02 / 03
Vol +	0B / 0A
Vol -	0D / 0C

**NOTE:** depending on the UID of Apple remote it will send one of the two possible codes for each button

Information in this document has been carefully checked for accuracy; however, Cambridge Audio's policy is one of continuous improvement, therefore design and specifications are subject to change without prior notice. If you notice any errors please feel

free to email us at: [www.cambridgeaudio.com/sts](http://www.cambridgeaudio.com/sts)

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may

be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

© Copyright Cambridge Audio Ltd 2008

Gallery Court, Hankey Place, London SE1 4BB England

Tel: +44 (0)20 7940 2200 Fax: +44 (0)20 7940 2233 Web: [www.cambridge-audio.com](http://www.cambridge-audio.com)