

640C CD/amp

System Code = A0 A0 (NEC Code)

Key	Command Code
1	01
2	09
3	11
4	19
5	02
6	0A
7	12
8	1A
9	03
0	0B
1+	13
Prog	1B
Play	15
Pause	1D
Stop	1C
Random	0E
Remain	0F
Skip left	04
Skip right	0C
Repeat	16
AB	17
<<	05
>>	0D
Intro	06
Space	1E
Open	07
Power On	46
Power Off	45

Also incorporates Amplifier codes

System Code = 16 (RC5 Code)

Key	Command Code
Aux/Phono	4
CD	5
Tuner/DAB	3
DVD	1
AV/MD	2
Tape Mon	0
Vol -	17
Vol +	16
Mute	13
on	14
off	15